

## Std Type 1 Letterbox Waterfeature

## Check with us if used in salt water pools

Code	L	D	L1	Н	С	T	F	Pump Delivery
1/300/S	300	300	220	100	NB 40 Socket	+- 150	+- 550	+- 80 I/min
1/400/S	400	300	320	100	NB 40 Socket	+- 200	+- 650	+- 100 l/min
1/600/S	600	300	520	100	NB 40 Socket	+- 250	+- 700	+- 120 l/min
1/800/S	800	300	720	100	NB 40 Socket	+- 250	+- 750	+- 200 l/min
1/1000/S	1000	300	920	100	NB 40 Socket	+- 250	+- 750	+- 250 l/min

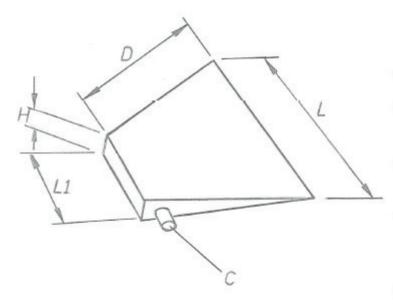

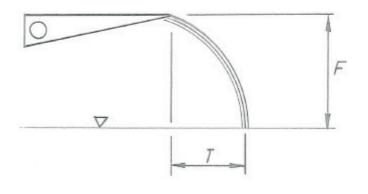

## Installation Instructions

- · Top to be level, ALWAYS
- Make sure the outlet slot is not closed up
- Leave plastic insert in slot during installation
- Observe the height "F" in above table,greater heights create noise
- Water inlet may be Left or Right
- Water supply must not contain solids greater than 0,5 mm in diameter
- · An inline strainer is essential
- Use "Soft Sealer" (like Silicone) around outlet slot