

Pond Vacuum Cleaner

The Waterhouse Pond Vacuum can remove sludge, leaves, small stones, blanket weed and more.



Specs:

- o 6m length Hose
- Remove debris up to 25mm
- o 250W Motor
- o Automatic power-off protection when no water after 3 minutes
- o Adjustable telescopic handle.
- o 250 Watt Motor
- o Q Max: 6000 L/H
- o H Max: 5 Meter



Pond Cleaner Pump PC-01 Use manual.

Thank you for purchasing and use Jebao pond cleaner Pump (PC-01 for short), using of the PC-01, you Can easily removes the debris from your garden pond. Thanks to the continuous vacuum process and automatic emptying of PC-01, you can greatly save time. For optimum performance and more efficient use, avoid improper usage and maintenance, failure to follow the instructions and warnings in this manual may result in pond vacuum damage and/or serious injury. Please be sure to read, thoroughly understand, and save this manual for future reference.

USE SCOPE:

It is used for outdoor garden ponds, waterscape, waterfalls, fountain, and koi pond etc. By cleaning and filtering the debris such as plant seeds, seeds cases, falling leaves, it will create a better living environment for the fish and other hydro bios.

PRODUCT FEATURES

- High performance and energy saving, wear well
 High performance standard asynchronous motor with new design, energy saving,
 larger suction, larger flow, removes debris up to 25 mm; adopt wear proof ceramic
 shaft which can be used in a longer time.
- 2. Adjustable telescopic handle, Convenient and practical Adjustable telescopic handle, when you don't use the PC-01, you can shorten the Adjustable telescopic handle length, reducing handle occupy space. When you want to use the PC-01, you should pull the handle from the pipe.
- 3. Remote control on/off switch, ease of use The wireless controller can make you comfortable for standing down and longer distance operation.

- 4. Motor part of the epoxy potting, have good grounded, safe with human, adult fish.
- 5. Easy to deposit and set up.

INSTALLATION:

- 1. To select the suitable Brush head according to different requirement, (Step 1) .
- 2. Closed the connect buckle (Step 2) , note the buckle closed and in right place $_{\circ}$
- 3. Install the elbow pipe (Step 3), screw up clockwise, screw off anticlockwise
- 4. Connect the hose to the outer connector (Step 4), be sure not to curve , tread and bend the hose. Don't use it when the hose damaged.
- 5. Install the outer connector to the outlet of elbow pipe and screw up the nut (Step 5).
- 6. Install the adjustable handle to the pipe of pond cleaner, (see step 6), then adjust it to a suitable length.
- 7.spin the Aluminium tube to a suitable place according to the arrowhead, then screw up the Aluminium on a opposite direction (Step 7) 。
- 8. put the battery in the handle box, be sure the place of anode and cathode (Step 8).

OPERATING INSTRUCTION:


- 1. Put the PC-01 to the edge of the pond, then pull the hose to the collect box and fix it, be sure not to contort the hose.
- 2. Double check to install the PC-01 correctly, connect the power, put it to the water. Seize the handle with your right hand, hand the aluminum tube on the left, push the lock button, then pull the handle off the bottom, loosen it. Be sure to switch on the power after the PC-01 is in the water. don't use it without water, or it can damage the PC-01
- 3. When finishing the cleaning, push the lock button with your right thumb, pull the handle, then loosen it.
- 4. Pull the PC-01 out of the water and tidy it.


Remark:

When you find there is something wrong with the PC-01, such as the sundries block the housing or the water from the hose change, you should clean the sundries.

Cleaning steps to below:

- 1. Take the housing down, clean the sundries in the housing and impeller with a brush.
- 2. Install the brush head to the pump hosing connector.

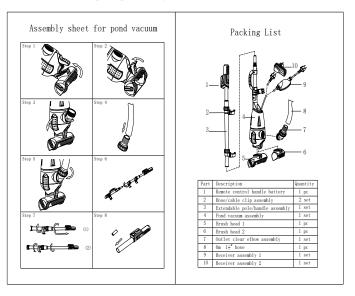

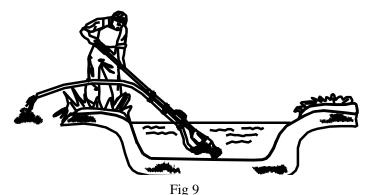

SAFETY INSTRUCTION

- 1. Ensure that the power voltage and frequency to be utilized conforms to the power requirements specified on the product nameplate before use.
- 2. Carefully examine the appliance after installation. if the supply cord is damaged, it must

- be replaced by the manufacturer or its service agent or similarly qualified person to avoid a hazard.
- 3. Never carry pond vacuum by the power supply cord. disconnect the plug of the pond cleaner pump when not in use, before putting on or taking off parts or before cleaning.
- 4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 5. The electrical connection should be in a water-proof area and should be at least 2 meters (6 feet) away from the edge of the pond.
- 6. Keep the electrical connections dry! Ensure that the electrical cord loops below the electrical outlet to form a "Drip Loop". This will prevent water from running down the cord into the electrical outlet.

DISPOSAL:



Do not dispose of this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.

Waterhouse

Customer Care line: 011 466 8250 shop@waterhouse.co.za

