

# Basic Manuel for Waterhouse & Dragonfly Pond/Fountain Pumps

## WARNING:

- Always use a 3 pin earthed plug
- Do not connect to any voltage other than that shown on the pump
- Do not pump flammable liquids
- Do not use water above 35°C

## PERFORMANCE:

- A clogged /dirty intake screen will greatly reduce performance.
- If the pump is used on a dirty surface, raise it slightly to reduce the amount of debris contacting intake.
- Do not let pump run when not submerged in water. Doing so may damage the pump.
- Always submerge pump first and then plug in the electrical outlet.

## MAINTENANCE:

- To clean pump, remove the front plate and the impellor. Use a small stream of water to remove any debris

### IF THIS DOES NOT WORK THEN TRY THE FOLLOWING:

- Try another outlet to ensure pump is getting electrical power
- Check the pump discharge & tubing for kinks & obstructions, Algae build up can be flushed out with a garden hose
- Remove the pump inlet to access the impellor area – turn the roter to ensure it is not broken or jammed (Please view our impellor guideline on FAQ's page).
- Weekly maintenance will add to your pumps life.

## WARRANTY:

A **2 year BURN OUT** warranty applies to all fountain pumps. The impellor has a 6 month warranty only. If Cable cords are cut then the warranty does not apply.